

RV Toilet Service Parts for Aria Deluxe II

Tools needed

- Phillips Screwdriver
- Flat-blade screwdriver
- Adjustable Wrench

Note: Read all instructions before beginning work.

To Remove Toilet From Floor

1. Turn off RV water supply per RV Owner's Manual.
2. Press both keypad buttons at the same time, twice, to open blade and drain bowl of water.
3. Pry off Bolt Caps with Flat-blade screwdriver. Use wrench to remove 1/2-inch Lag Screws.
4. Swivel Toilet to gain access to back.
5. Turn off RV's power supply to the Toilet.
6. Disconnect Water Supply Line with Adjustable Wrench (Fig. A).
7. Disconnect Toilet's 12-volt power hookup to RV.
8. Place an old towel or soft cloth on work surface. Remove Toilet from floor and place upside-down on work surface.
9. Remove old Closet Flange Seal (may be found on toilet or in floor at Closet Flange). Discard.
10. Cover Holding Tank opening to contain odor.

To Remove Old Part



1. Remove and save Sound Deadening Insulation (if present) from over Mechanism (secured with a Velcro™ strap behind the Mechanism End Cap).
2. Gently move inner wires out of the way and remove 6 Mechanism End Cap Screws (Fig. A).
3. Gently ease off Mechanism End Cap.
4. Remove small curved Spring Washer (found in Mechanism End Cap or on nylon shaft as in Fig. B). Discard.

To Replace Part

1. Replace with new small curved Spring Washer, concave side facing Mechanism.
2. Reinstall Mechanism End Cap.
3. Reattach 6 Mechanism Screws.
4. Reinstall Sound Deadening Insulation (if present).

To Replace Toilet To Floor

1. Secure new Closet Flange Seal, lip side up, to Toilet.
2. Position Toilet over flange.
3. Reconnect Water Supply Line.
4. Reconnect 12-volt power supply to Toilet.

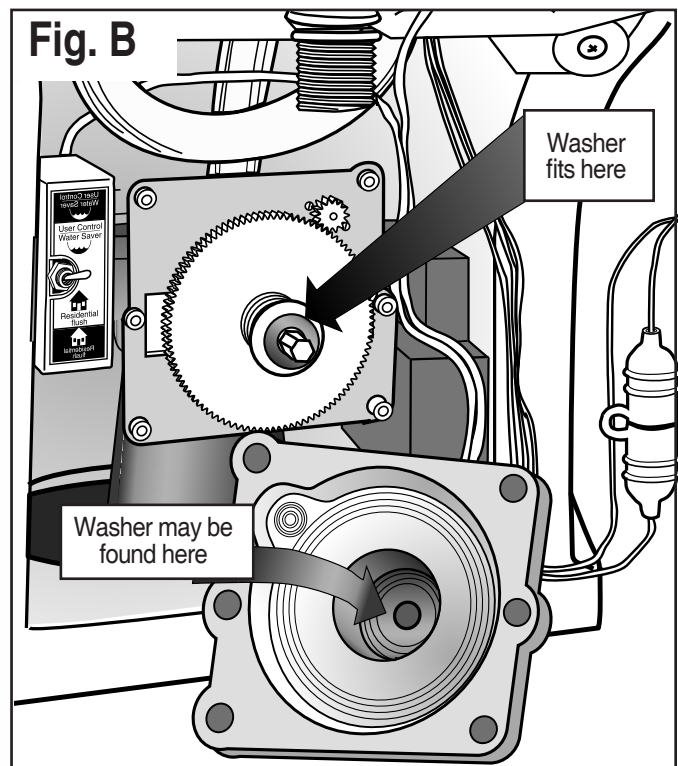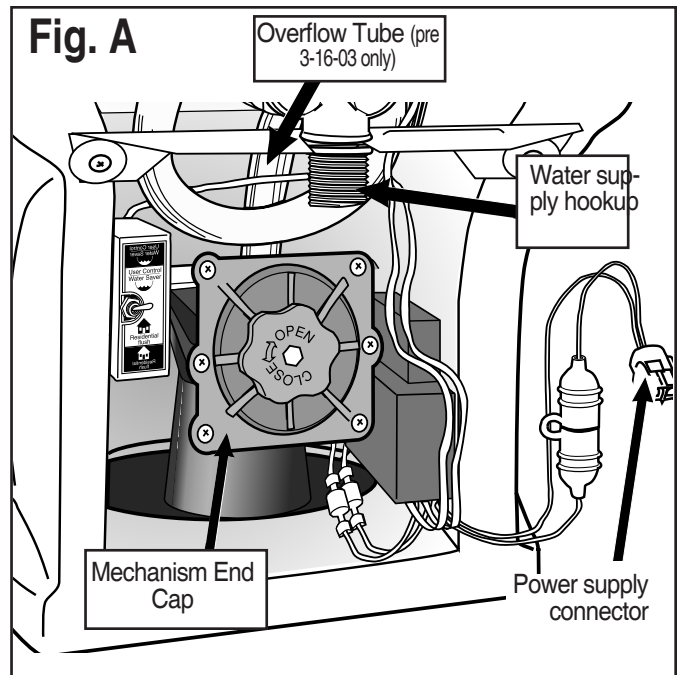

5. Reconnect RV's power supply to the Toilet.
6. Turn on RV's water supply. Press Toilet flush button to close blade and to flush test.
7. Secure to floor with Lag Screws. Tighten.
8. Resecure Bolt Caps.