

RV Toilet Service Parts for Aria Deluxe II

Tools needed

- Flat-blade screwdriver
- Adjustable Wrench
- Pliers

Note:

- Read all instructions before beginning work.

To Remove Toilet From Floor



1. Turn off RV water supply per RV Owner's Manual.
2. Press both keypad buttons at the same time, twice, to open blade and drain bowl of water. *If Mechanism does not work, you will have to open the valve manually. Remove the Sound Deadening Insulation (if present) from the back of the Mechanism to access the Mechanism Lead Screw. Turn knob shown or use a 5/16" socket wrench to turn the screw and open the valve.*
3. Pry off Bolt Caps with screwdriver. Use wrench to remove 1/2-inch Lag Screws.
4. Swivel Toilet to gain access to back.
5. Turn off RV's power supply to the Toilet.
6. Disconnect Water Supply Line (Fig. A).
7. Disconnect Toilet's 12-volt power hookup to RV.
8. Place an old towel or soft cloth on work surface. Remove Toilet from floor and place right-side-up, facing you, on work surface.
9. Remove old Closet Flange Seal (may be found in toilet or in floor at Closet Flange). Discard.
10. Cover Holding Tank opening to contain odor.

To Remove Old Part

1. Using pliers, squeeze and lower the upper Hog Ring Clamp on Tube.
2. Rock Vacuum Breaker back and forth from Flush Tube (without Clamp) to separate Vacuum Breaker from Tube. Discard old Vacuum Breaker.

To Replace Part

1. Push Solenoid Tube over barb on new Vacuum Breaker.
2. Move Clamp over Vacuum Breaker barb (about an inch from end of Tube).
3. Insert Flush Tube onto barb.

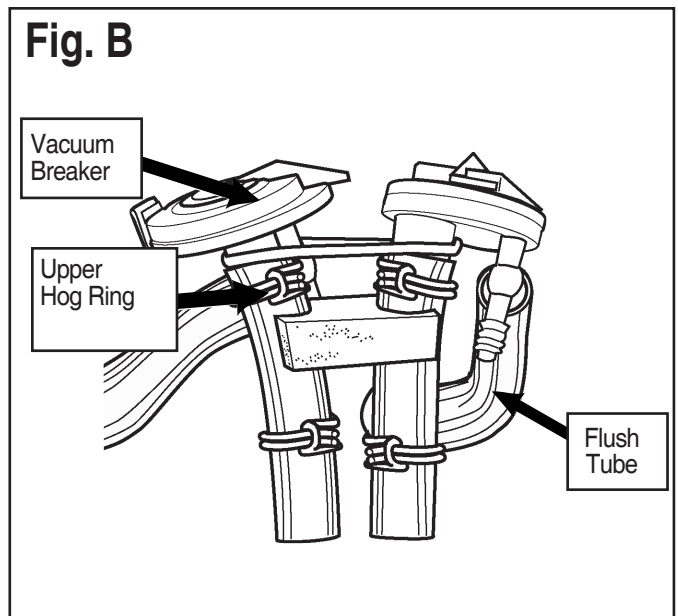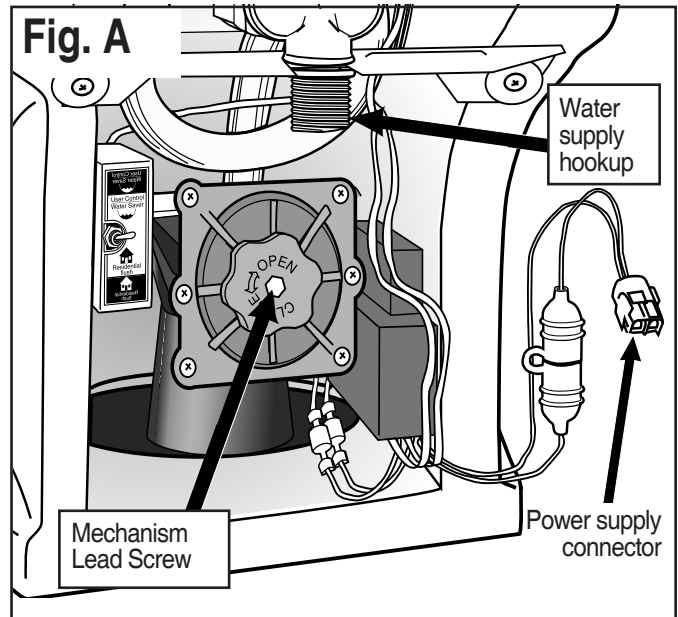

To Replace Toilet To Floor

1. Secure new Closet Flange Seal, lip side up, to Toilet.
2. Position Toilet over flange.
3. Reconnect Water Supply Line.
4. Reconnect 12-volt power supply to Toilet.
5. Reconnect RV's power supply to the Toilet.
6. Turn on RV's water supply. Press Toilet flush button to close blade and to flush test.
7. Secure to floor with Lag Screws. Tighten.
8. Resecure Bolt Caps.