



	Spare part number	Spare part number
1	Right upper hinge	
2	Left upper hinge	692751
3	Left bottom hinge	
4	Right bottom hinge	
5	Thermistor	692776
6	Thermistor cover	
7	Door switch LED PCB	692801
8	Technical panel	692754
9	Circuit board light panel	692803
10	Control panel	
11	Control housing	<del>692804</del>
12	Sticker	<del>692805</del>
13	Fan	692777
14	Fan cover	692806
15	Fan net	
16	Light housing	692779
17	LED light	
18	Light cover	
19	Breakfast tray	692808
20	Door latch plate	692758
21	Winter lock support	
22	Plate	692362
23	Drip cup	692810
24	Condenser fan cover	691887
25	Condenser fan	692785
26	Power cord	691873
27	2-way valve	
28	Freezer door	691877
29	Food retainer	692789
30	Cover slide out box	691865
31	Clip shelf large	<del>692791</del> 692761
32	Shelf	692816
33	Cabinet door	692817
34	Door panel	69233227SP
35	Door Bin	692794
36	Drawer divider	691878
37	Vegetable bin slide guide	691874
38	Door cover	
	< E006#ZDW00530001	692764
	≥ E006#ZDW00530001	692875

39	Drawer bin	691860	
40	Lower hinge shaft		692883
41	Screw cap		
42	Upper hinge shaft		
43	Upper hinge shaft spring		
44	Panel retainer		
	< E006#ZDW00530001	692768	
	≥ E006#ZDW00530001		692885
45	Handle groove		692886 ≥ E006#ZDW00530001
46	Handle		
47	Handle connection shaft	692770 < E006#ZDW00530001	
48	Big handle spring		
49	Small handle spring		
50	Control module		
	Serial Number range		
	ExxxxDWxxxxx	691391	
	Exxx#xDW0026xxxx - Exxx#xDW0042xxxx		
	Exxx#xDW0043xxxx - Exxx#xDW0065xxxx	692821	

Xxxxxx = not available anymore

**Note Identification Label**

With a request for information or service, always provide the serial number of the refrigerator. The serial number is the code below the barcode on the identification label.

