


THETFORD Installation Guide

Electra-Magic #05223 Vent Kit

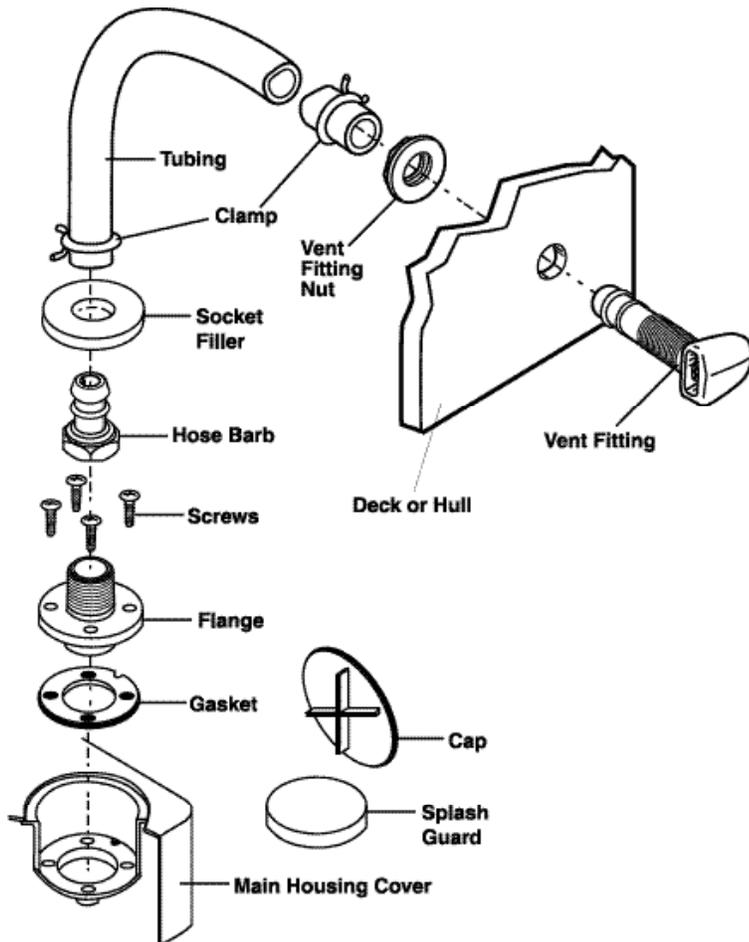

1. Remove Cap and Splash Guard from Electra-Magic Main Housing Cover on the side desired for the Vent Kit installation.
2. Determine where the Vent Fitting will be located and drill a 3/4-inch hole through the deck (hull) at that point. Note: Tube routing should not create sharp bends or traps.
3. Insert Vent Fitting through hole and tighten down nut securely.
4. Cut Tubing to proper length and put over barbed end of Vent Fitting. Move Clamp into place over the barbed area.
5. Screw Flange tightly into the Hose Barb.
6. Place Gasket and Flange into the hole provided on the Electra Magic, noting locator pin position, and screw securely into place.
7. Stretch Socket Filler over the hex body of Hose Barb and work Socket Filler down until it is flush with the top of Main Housing Cover.
8. Put Tubing over Hose Barb and move Clamp into place over the barbed area.