


INSTALLATION INSTRUCTIONS HOLD DOWN KIT


– with carpet

met vloerbedekking / avec tapis / mit Teppich / con moquette / con alfombra / com carpete / med teppe / med gulvmåtte / maton kanssa / med matta / s preprogo / с ковровым покрытием

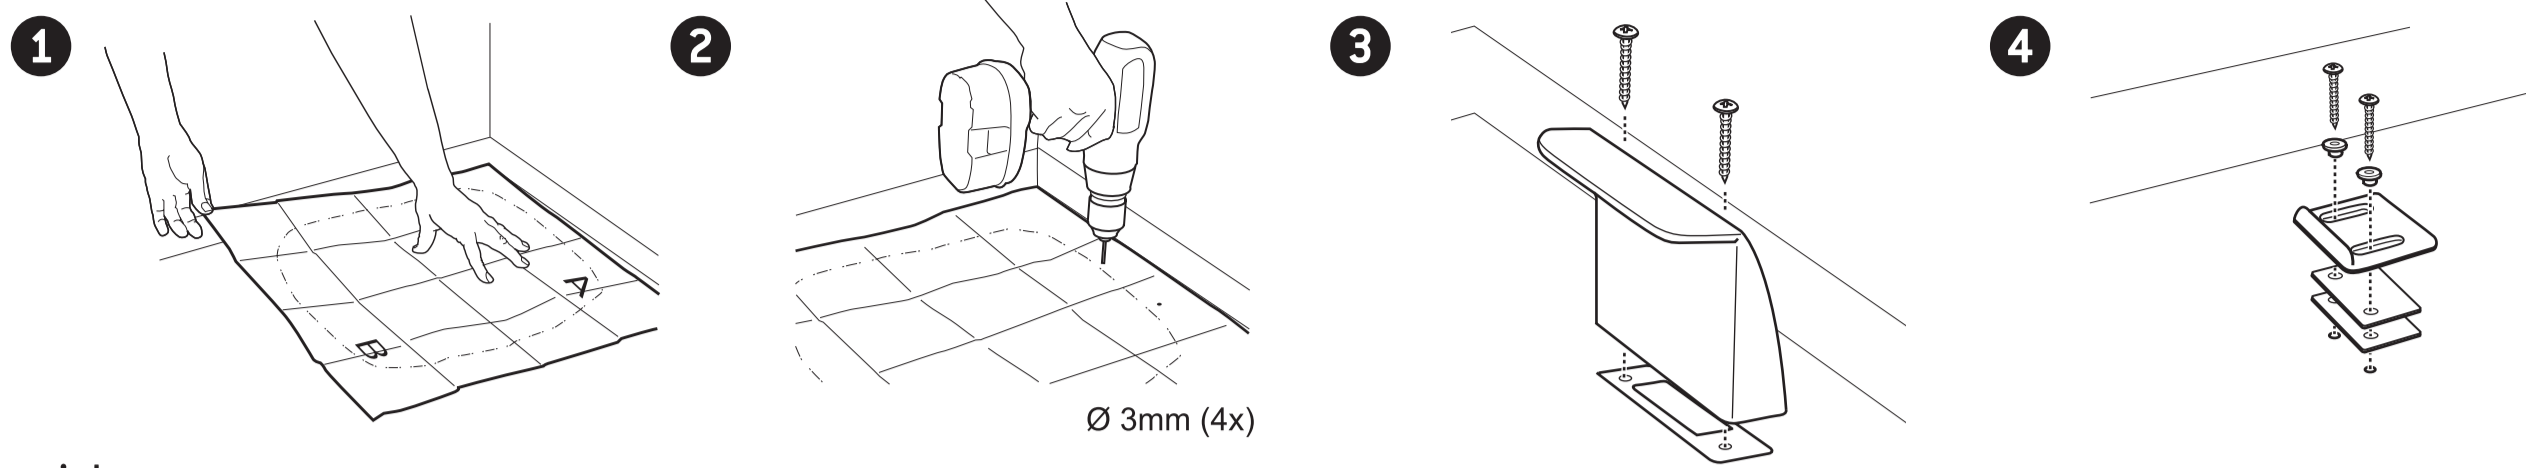


– without carpet

zonder vloerbedekking / sans tapis / ohne Teppich / senza moquette / sin alfombra / sem carpete / uten teppe / uden gulvmåtte / ilman mattoa / utan matta / brez preprogo / без коврового покрытия

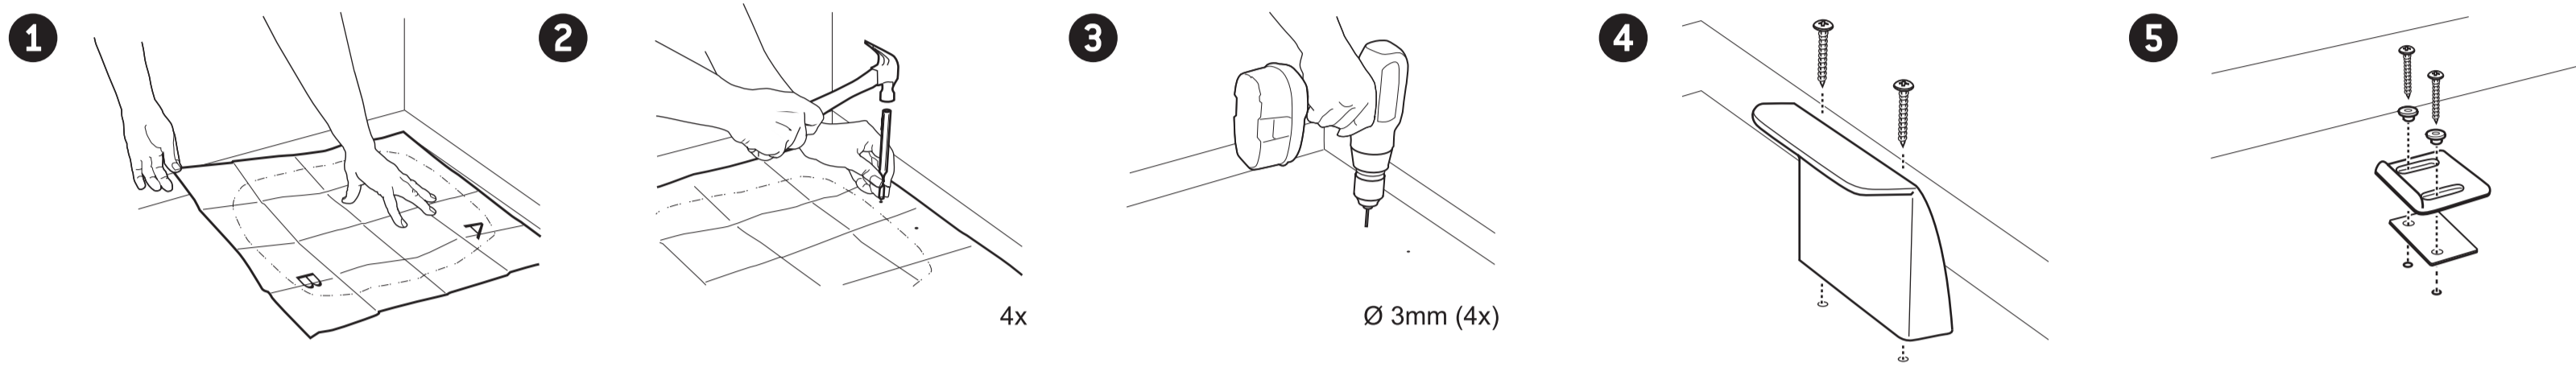


PORTA POTTI QUBE 165 & 365 / CAMPA POTTI QUBE XG & XGL / PORTA POTTI 550P / CAMPA POTTI XT

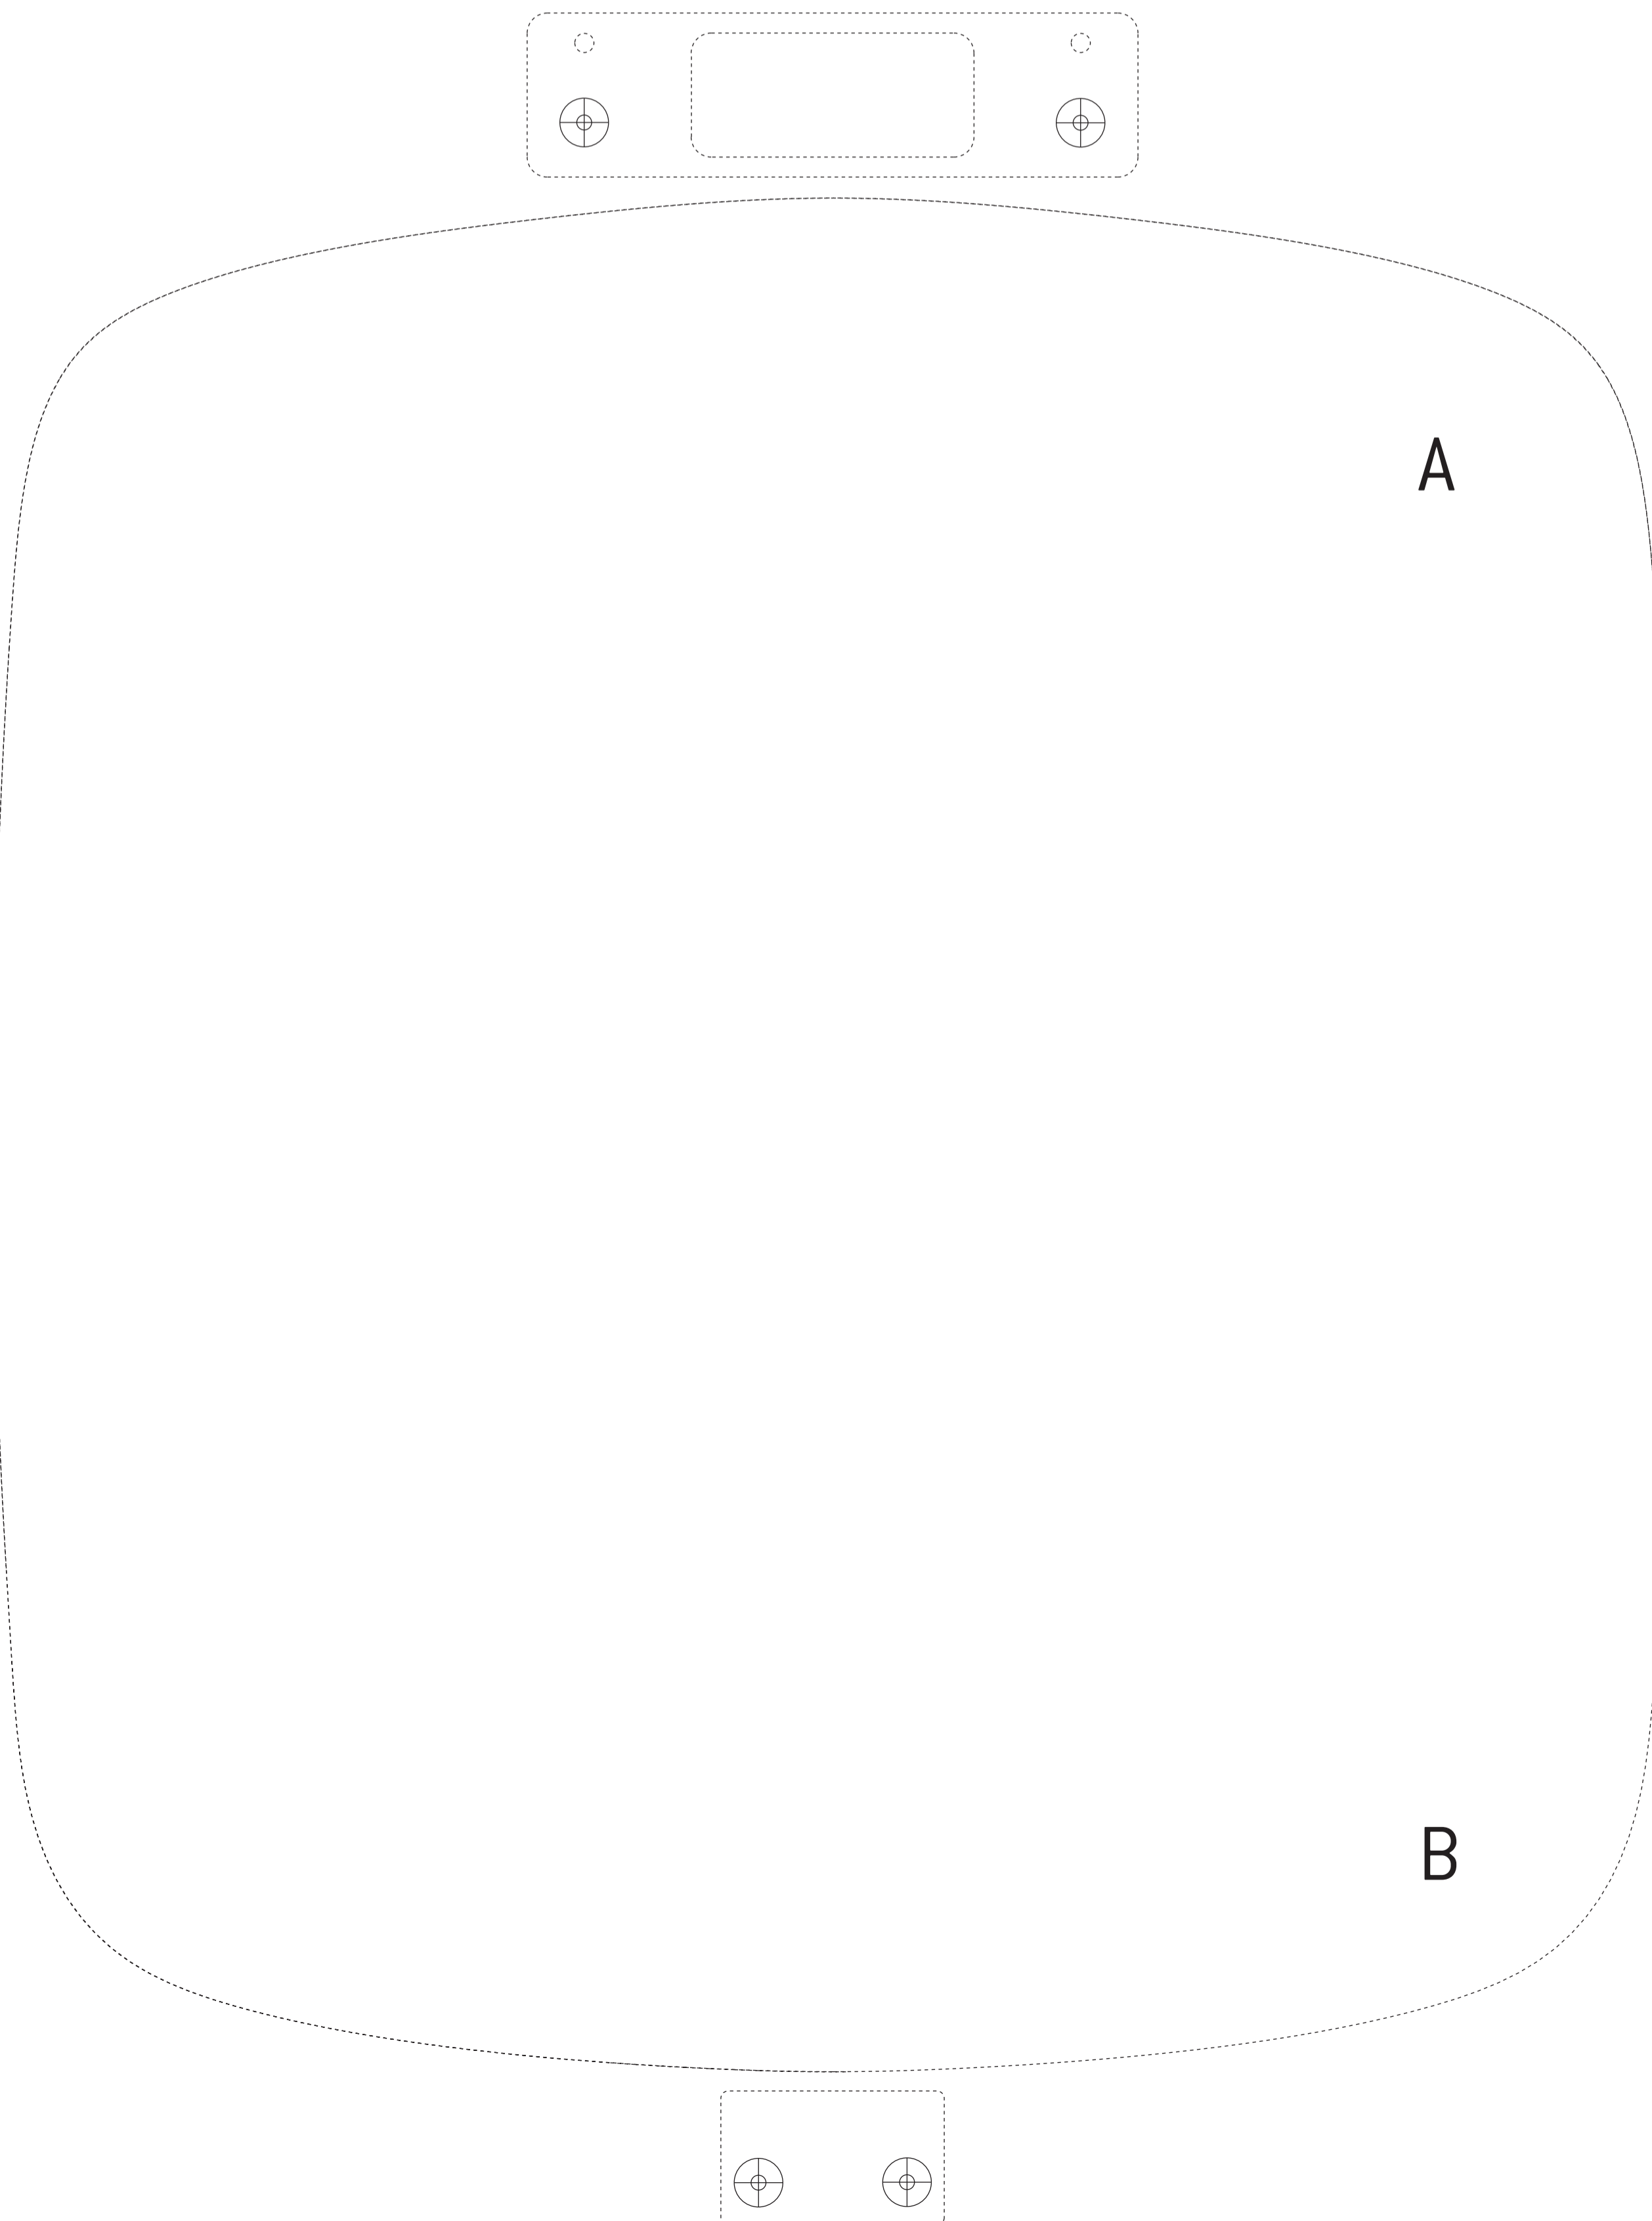

INSTALLATION INSTRUCTIONS HOLD DOWN KIT



— with carpet

met vloerbedekking / avec tapis / mit Teppich / con moquette / con alfombra / com carpete / med teppe / med gulvmåtte / maton kanssa / med matta / s preprogo / с ковровым покрытием

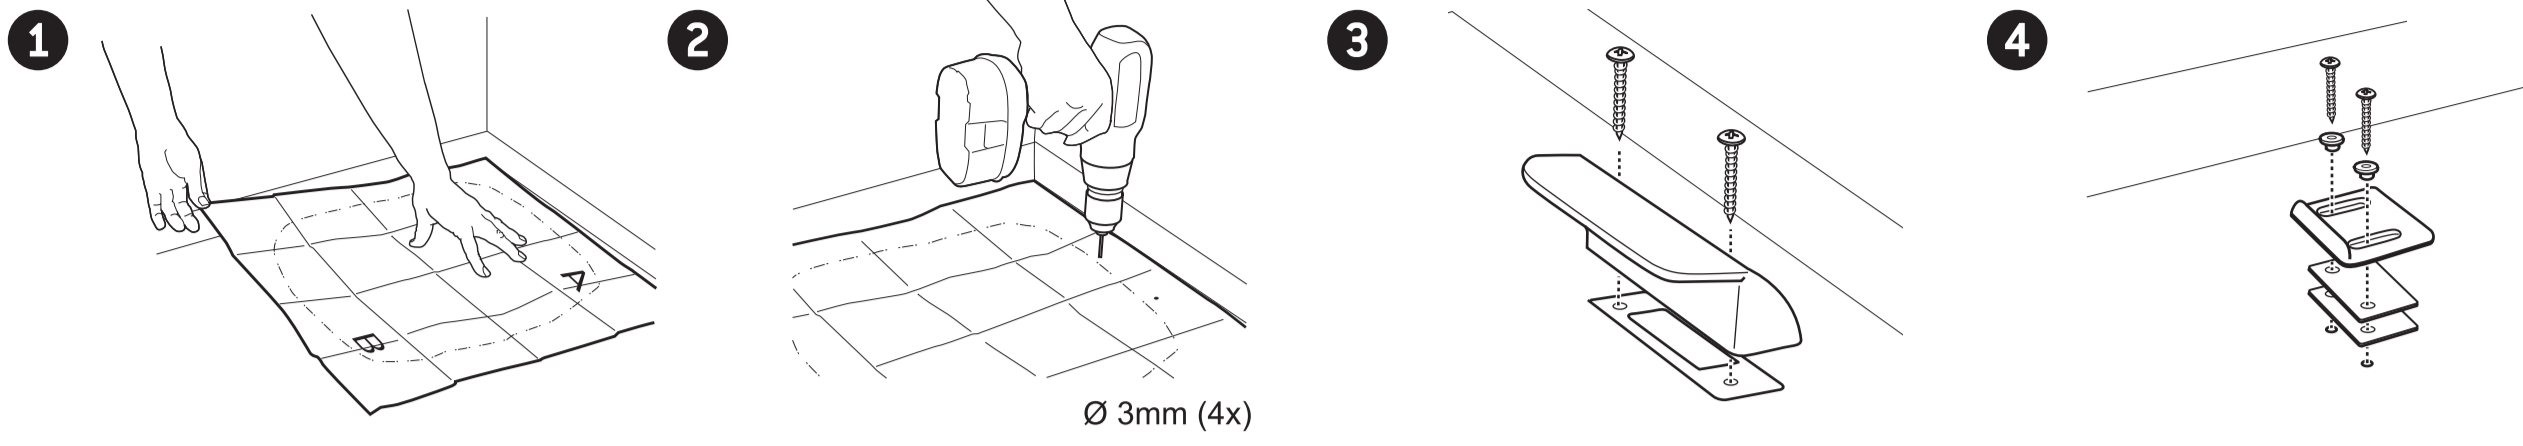

— without carpet

zonder vloerbedekking / sans tapis / ohne Teppich / senza moquette / sin alfombra / sem carpete / uten teppe / uden gulvmåtte / ilman mattoa / utan matta / brez preproge / без коврового покрытия

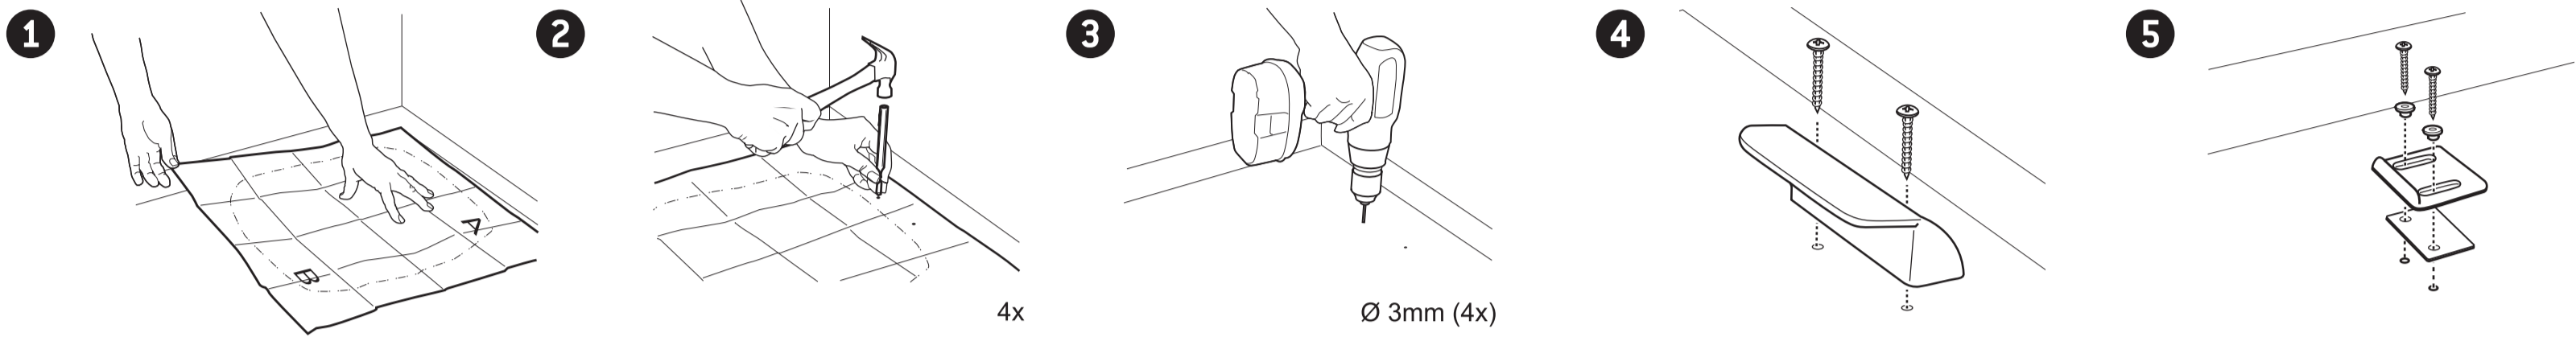

PORTA POTTI QUBE 335 / PORTA POTTI 260B & 260P

