

Repair instruction

Refrigeration
Absorption Refrigerators
N3000 / N4000 Series

DOOR SWING KIT N3000/N4000

Spare part numbers

- 691880 (N3080-N4080)
- 691881 (Flat doors E/E+ controls)
- 691882 (Flat doors Automatic controls)
- 691883 (Curved doors E/E+ controls)
- 691884 (Curved doors Automatic controls)

Content

1. Control panel right
2. Sticker
3. Screws
4. Screw caps
5. Center hinge right
6. Bottom latch left



A Remove the refrigerator from the furniture, if applicable.

B Remove the sticker with a small flat screwdriver




C Remove the control panel

NOTE: keep the control panel for model N3080



D Remove the door of the refrigerator

NOTE: some models have 2 doors

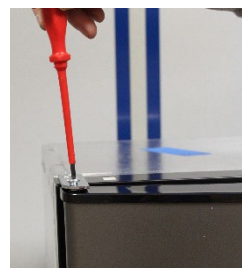

Repair instruction

E

Interchange the hinge parts on the door(s) of the refrigerator

NOTE: some models have 2 doors



F

Remove the displayboard by pushing the white knobs together



G

Remove the technical panel from the mounting box.

NOTE: This is only applicable for models with 1 door. Models with 2 doors do not have a mounting box




H

Remove the communication cable through the mounting box.



I


Remove the mounting box

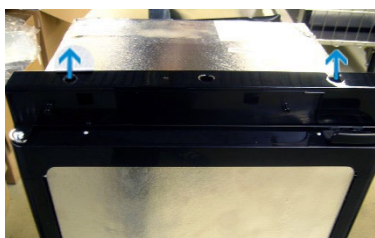

Repair instruction


J

Turn the mounting box 180 degrees.

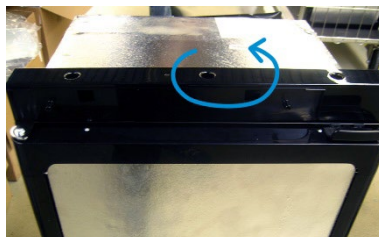


K

Place back the communication cable and technical panel in reverse order.

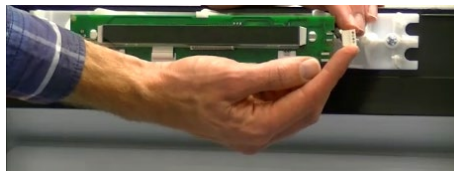

L

Interchange the hinge parts on the cabinet of the refrigerator (A parts to A, B parts to B).

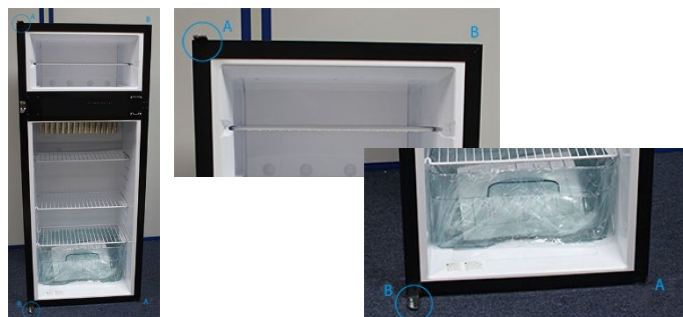

M

Remove the bottom latch from the right side and place the bottom latch left (#6) on the left side.


NOTE: only some models have a bottom latch (#6)



N

Move the strike plate to the other side

NOTE: only models with 2 doors have 2 strike plates

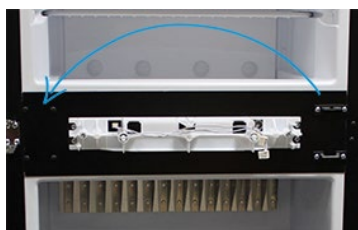


Repair instruction

O

Remove the center hinge and put the center hinge right (#5) in position


NOTE: only models with 2 doors have a center hinge

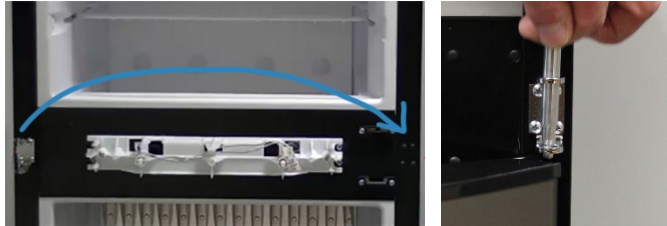

P

Put the mounting box back in position


NOTE: models with 2 doors do not have a mounting box

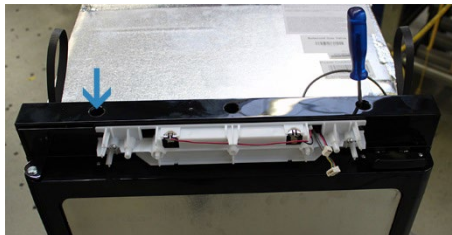

Q

Put the door(s) back in position

NOTE: some models have 2 doors

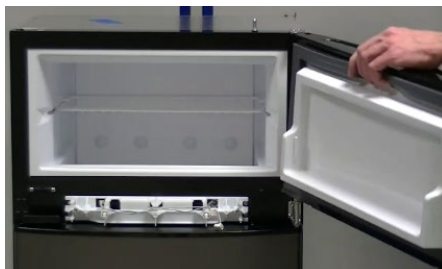

R

Put the control panel right (#1) in position

NOTE: for model N3080 put the old control panel back in position



S

Put the sticker in position

